

Sonulab StompStation PRO

Firmware Update guide



Preliminary Notes

Firmware updates are performed exclusively within **VoidX-Control**; no additional tools are required. Install the **latest version** of VoidX-Control before proceeding.

Updates are supported via **USB, Wi-Fi, or Bluetooth** on **Mobile** and **Desktop** platforms. While all configurations are functional, a **wired USB connection on Desktop (Windows or Mac)** is recommended.

Phase 1: Update Mode Initialization

1. If the StompStation PRO is currently active, **power it OFF**.
2. Wait ten seconds, then power the unit **ON**.
3. Once the **Sonulab logo** appears, press and hold the **UPD button** for several seconds.

The device will then initialize in **Update Mode**.



Phase 2: Firmware Update

- Download an **official firmware** from the **Sonulab website** and **extract** it to obtain a **.upd** firmware update file.
- Launch the **latest version** of **VoidX-Control** and establish a connection with the StompStation PRO. **Note:** *The interface will appear simplified, as the device does not display operational parameters while in **Update Mode**.*
- Navigate to the rightmost menu, select “**Firmware Update**”, and load the previously downloaded file. *See image below.*
- **Wait** for the firmware update to complete.
- Power the StompStation PRO **OFF**, wait ten seconds, and power it **ON**. The update becomes active upon this initial reboot.

